


Heat Recovery Ventilation Systems

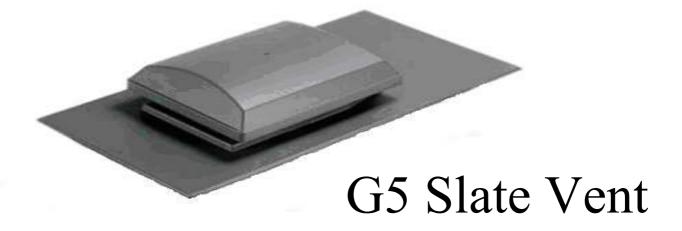



## Adaptor

The slate vent replaces a slate in the roof. It is a G5 in that it accommodates 150mm duct. We connect an adaptor to it and in turn we connect our 150mm ducts to the adaptor. When fitting the slate vents ensure that the associated adaptors can fit through the timbers. There should be no lathes in the way. They should be located 2.5 meters apart so as to avoid exhausted air being brought back into the system. Keep them well clear of soil pipes, extracts from cookers, boilers, chimneys, etc.